Sunbeam

FM/AM CLOCK RADIO

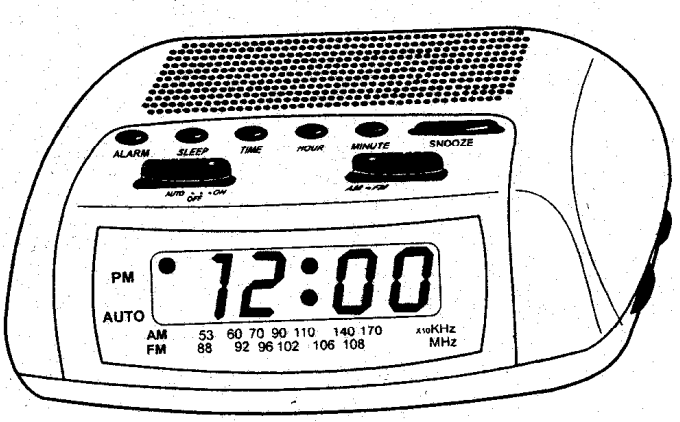

WAKE TO MUSIC OR ALARM • BATTERY BACK-UP

Model: 89014

The lighting flash and arrowhead within the triangle is a warning sign alerting you of 'dangerous voltage' inside the product.

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER - SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

IMPORTANT SAFETY INSTRUCTIONS

1. Read instructions - All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions - The safety and operating instructions should be retained for future reference.
3. Heed Warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow Instructions - All operating and use instructions should be followed.
5. Water and Moisture - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
6. Carts and Stands - The appliance should be used only with a cart or stand that is recommended by the manufacturer.

6A. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

7. Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. Ventilation - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug or similar surfaces that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
9. Heat - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
10. Power Sources - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
11. Grounding or Polarization - The precautions that should be taken so that the grounding or polarization means of an appliance is not defeated.
12. Power-Cord Protection - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying

particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

13. Protective Attachment Plug - The appliance is equipped with an attachment plug having overload protection. This is a safety feature. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same over load protection as the original plug.
14. Cleaning - The appliance should be cleaned only as recommended by the manufacturer.
15. Power Lines -An outdoor antenna should be located away from power lines.
16. Outdoor Antenna Grounding - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.
17. Nonuse Periods - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
18. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosures through openings.
19. Damage Requiring Service - The appliance should be serviced by qualified service personnel when:
    A. The power-supply cord or the plug has been damaged; or
    B. Objects have fallen, or liquid has been spilled into the appliance; or
    C. The appliance has been exposed to rain; or
    D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
    E. The appliance has been dropped, or the enclosure damaged.
20. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

1. Hour
2. Minute
3. Alarm Set/Off
4. Sleep
5. Tuning Control
6. Volume/Buzzer Control
7. Time Set
8. Band Switch
9. Snooze Button
10. On/Off/Auto

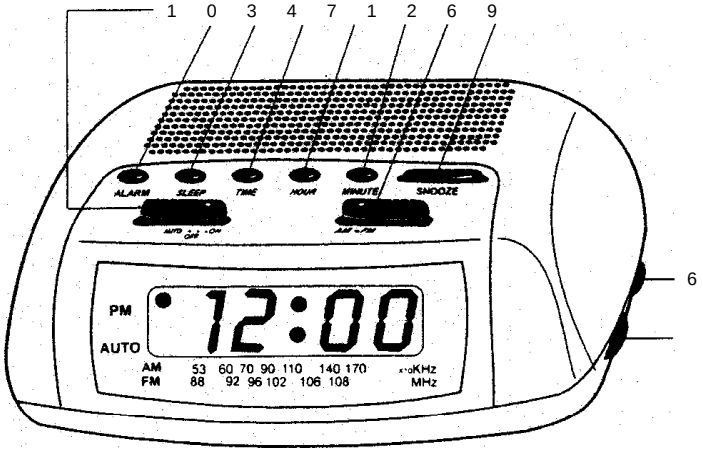

BOTTOM OF SET: Battery compartment for 9 volt battery (not included) for temporary time storage.

ELECTRONIC CLOCK OPERATION

1. Plug the AC line cord into 110v/60Hz AC home outlet.
2. The set is now working as an electronic clock and the display will flash to show you it is not set correctly.
3. To set the correct time, depress the time set button and hour set button simultaneously, release the hour set button when the correct hour is reached. Now depress the minute set button and time set button simultaneously, to set the readout to the correct time

RADIO OPERATION

1. Slide the ON/OFF/AUTO Switch to "On" position.
2. Slide Band Switch to FM or AM position.
3. Turn the Volume Control to desired volume.
4. Turn the Tuning Control to select your favorite station.
5. Antenna

   For AM reception, this radio incorporates a highly sensitive ferrite core bar antenna.

   For FM, this set is specially equipped with an FM antenna built right into the power line cord.

Be sure to untwist the power cord to its fullest length for peak performance.

WAKE TO RADIO

Having selected your station and set the volume at the desired level, proceed as follows:

1. Slide the ON/OFF/AUTO Switch to "Auto" position.
2. Press the Alarm Set Button and while this button is depressed, press the Hour Button and then the Minute Button until the desired wake up time is reached. The wake up time is now entered into memory. To check the wake-up time simply press the Alarm Set Button and the clock will show the pre-set time. The preset wake up time will continue to be registered in memory and the radio will switch on by itself at the same time the next day.

   To switch the radio off simply press the Alarm Off Button.
3. To permanently turn the alarm off, slide the ON/OFF/AUTO switch to the "OFF" position.

WAKE TO BUZZER

Set the controls as for "Wake to Radio" but switch volume to Buzzer position. Buzzer can then be switched off by pressing the Alarm Off Button or it can be converted to the radio by selecting switch to the "ON" position.

SLEEP TO MUSIC

The radio can be set to play and to switch off automatically for a length of time from 1 minute to 1 hour 59 minutes by following this procedure - With all the controls pre-set in the "Wake to Radio" positions, depress-the Sleep Button and Press the Minute Button to count down to the desired sleep time. To switch off the radio before the end of the registered sleep time period, simply press the Snooze Button.

SNOOZE CONTROL

The snooze button allows the user extra sleep time of about 9 minutes after the alarm is switched on at the pre-set wake up time.

BATTERY BACK-UP

(For Temporary Time Storage Only)

Connect a 9 volt battery (not included) to the terminals inside the battery compartment. It is recommended that the set is disconnected from the main power supply while the battery is fitted. Your set will not work normally from the main power supply but there is now the advantage that if there is a main power current failure, your clock will continue to work. The clock display will not light up, as the clock time will be held in the clock memory by the battery back-up system. This enables you to move the set from place to place without re-setting the clock every time. The battery back-up system is only meant to be used for short temporary power failures. For longer durations, the battery may become exhausted or there may be some deviation in accuracy. When the battery is exhausted, it should be removed from the set to prevent leakage. If you do not wish to take advantage of the battery back-up system, your set will work normally without a battery. However, if disconnected from the main power supply, the clock figures will flash when the main power supply is re-connected and you must re-set the clock as described in the Electronic Clock Operation paragraph.

GENERAL CARE

The cabinet can be cleaned with a slightly damp cloth (make sure the cord is disconnected from main power supply).

Avoid leaving the clock radio in direct sunlight or in hot, humid, dusty places. Keep the set away from heating appliances and electrical generated noises, such as fluorescent lamps or motors.

Warning: Changes or modifications to this unit not **expressly approved by the** party responsible for compliance could void the user's authority to operate the equipment.

ONE YEAR LIMITED WARRANTY

Sunbeam Household Products warrants that, for a period of 1 year from the'date of purchase, this product shall be free of defects in material and workmanship under normal use. Our obligation hereunder is limited to repair or replacement, at our option, of this product during the warranty period, provided the product and proof of purchase is sent postage prepaid to Sunbeam, 76 Passaic Street, Wood-Ridge, NJ 07075. California residents may call our toll free number to locate the nearest authorized service center (800) 526-2832. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

1996 Sunbeam Corporation or its affiliated companies, all rights reserve-d. Sunbeam@